


AILERON FITTINGS

SCALE: NTS

NOTE:
WITH AILERONS OPERATING FREE AND EASY AND WITH AILERONS PUSH ROD DISCONNECTED FILL STRUT WITH SMALL LEAD SHOT UNTIL AILERONS ARE ALMOST BALANCED. INSERT EPOXY (RUNNY-LIQUID) UNTIL LEAD IS SECURED AND ANY ADDITIONAL SHOT AS REQUIRED TO BALANCE.

NOTE:
SEE MATERIAL LIST SHEET 7 FOR MATERIALS UNLESS NOTED OTHERWISE.

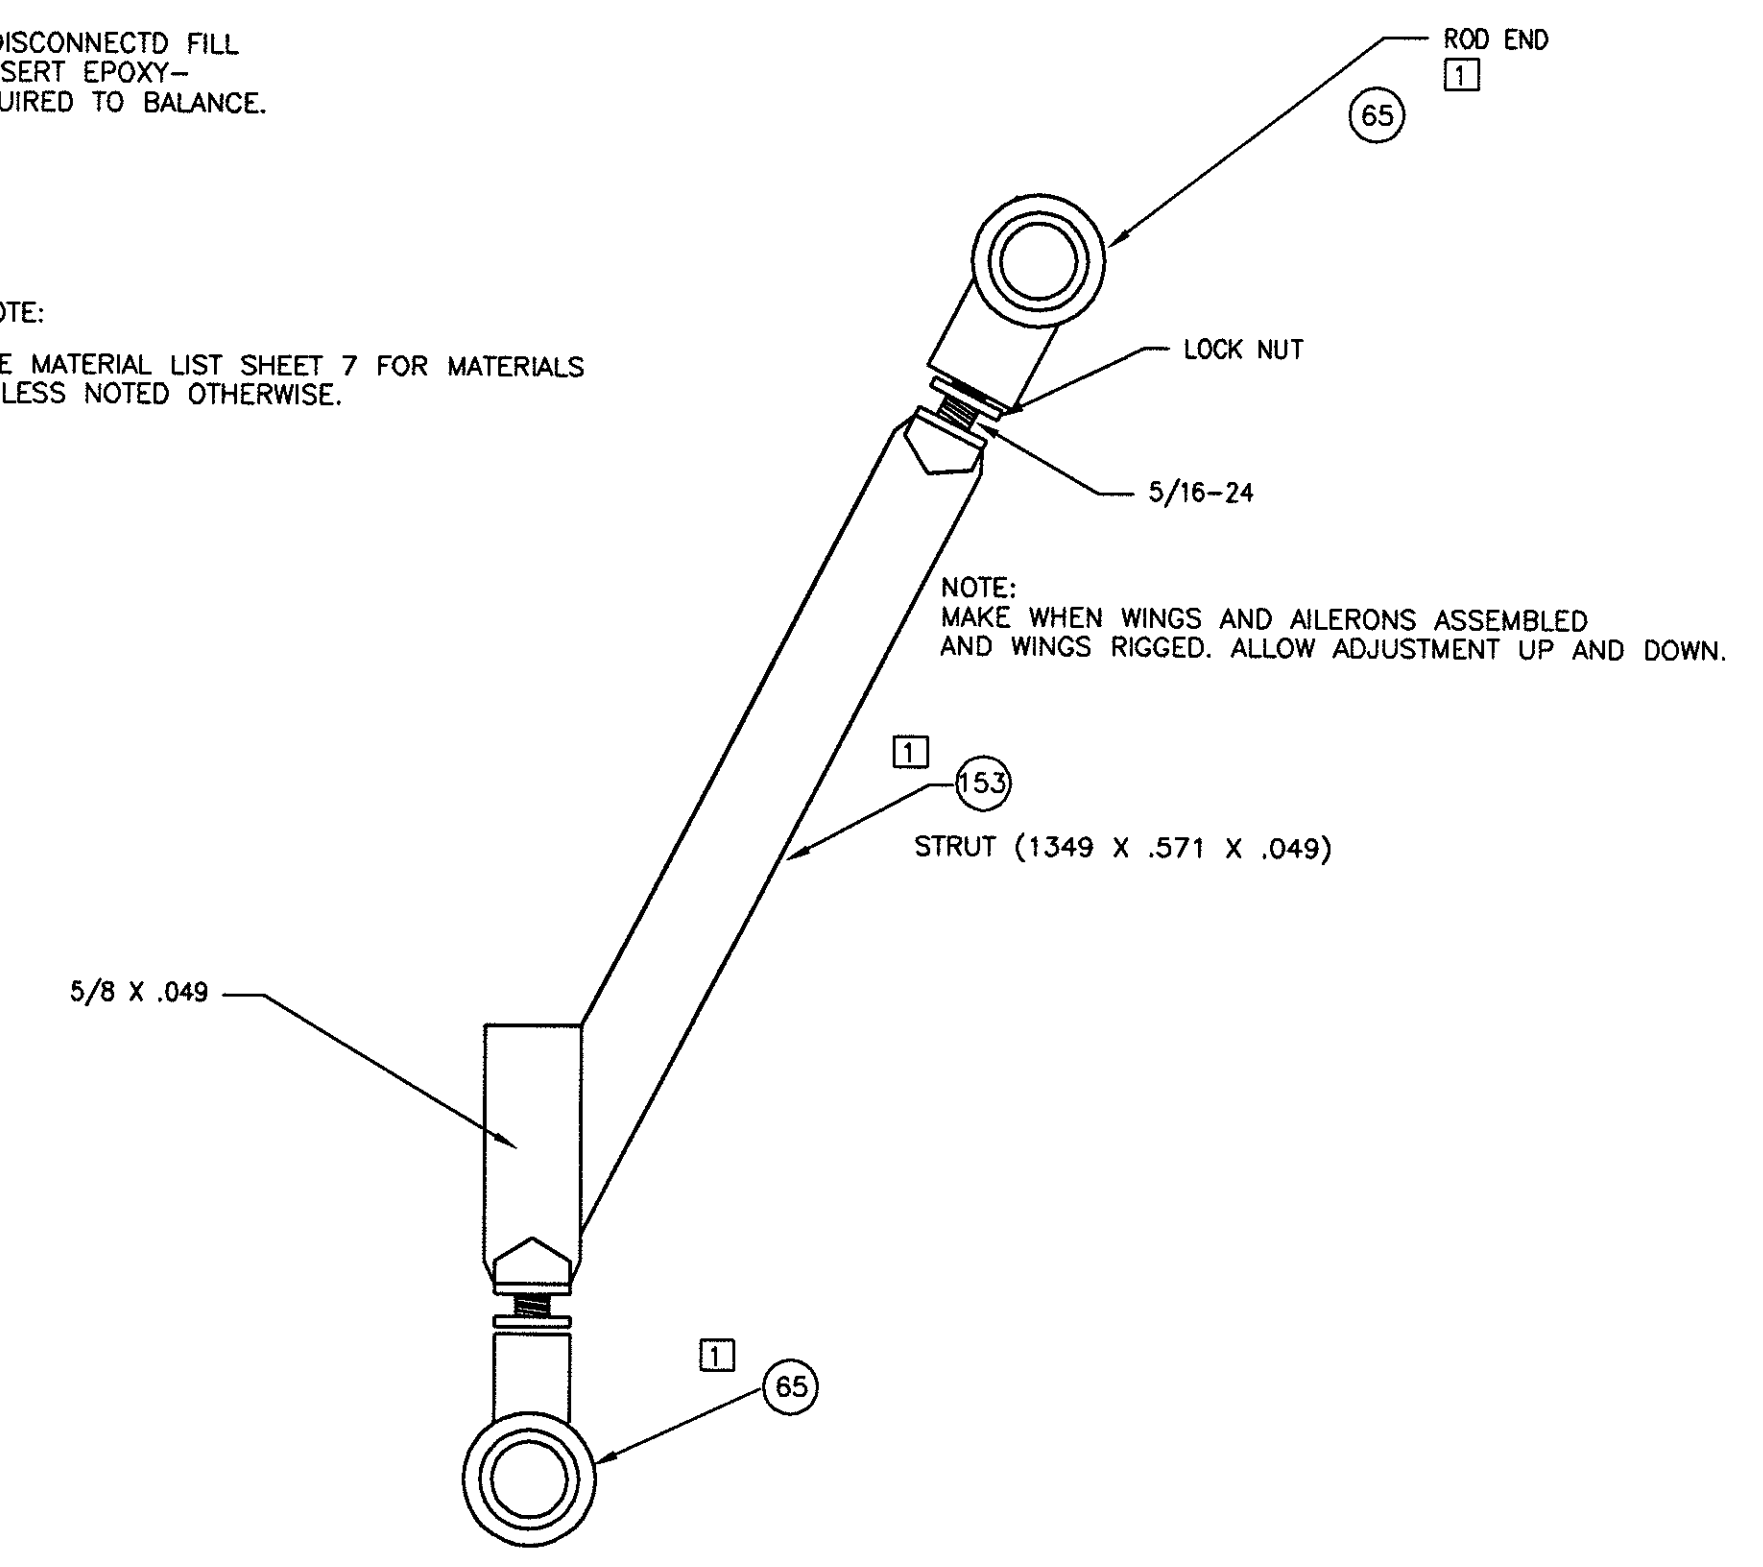

1 MATERIAL LIST SHEET


REVISION:	DATE:

Sheet No. 7A Starduster Too Model SA300

DRAWN BY: 6/1/98

DESIGN BY:

FORWARD MOUNTED AILERON SLAVE STRUT



PRODUCT NAMES AND PLANS ARE COPYRIGHTED ALL RIGHTS RESERVED-PLANS PURCHASER IS AUTHORIZED TO BUILD ONE AIRPLANE ONLY-UNAUTHORIZED REPRODUCTION, OR COMMERCIAL USE OF THESE PLANS EXPRESSLY PROHIBITED.

129 Chuck Yeager Way, Oroville, CA 95965
 PHONE: 530-534-7434 FAX: 530-534-7451
 WEB SITE: www.starduster.com