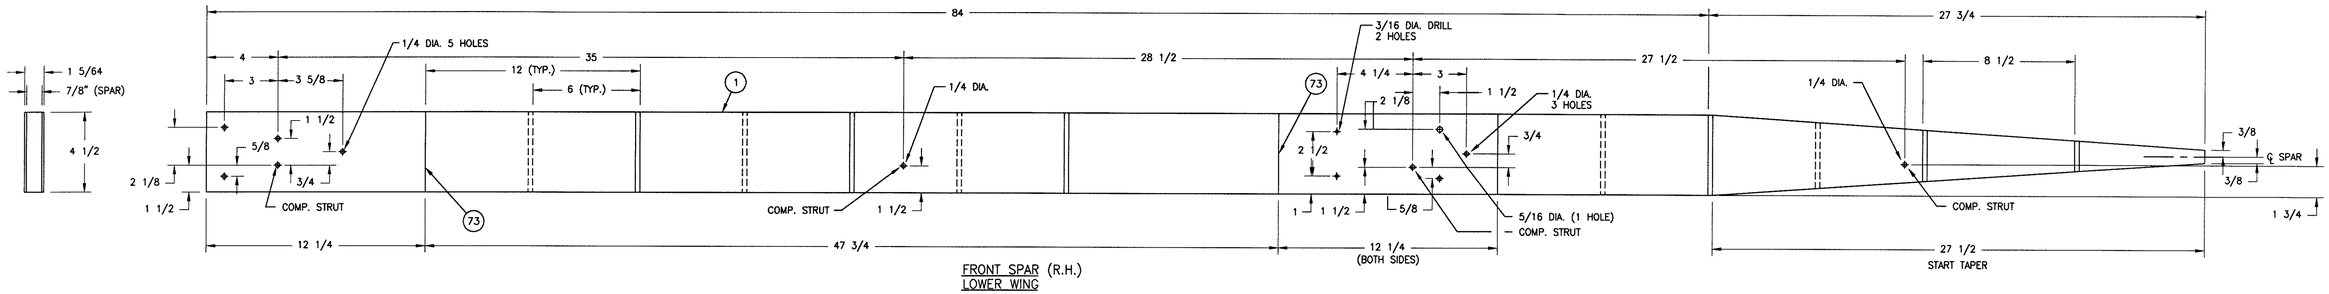

FRONT SPAR (R.H.)
LOWER WING

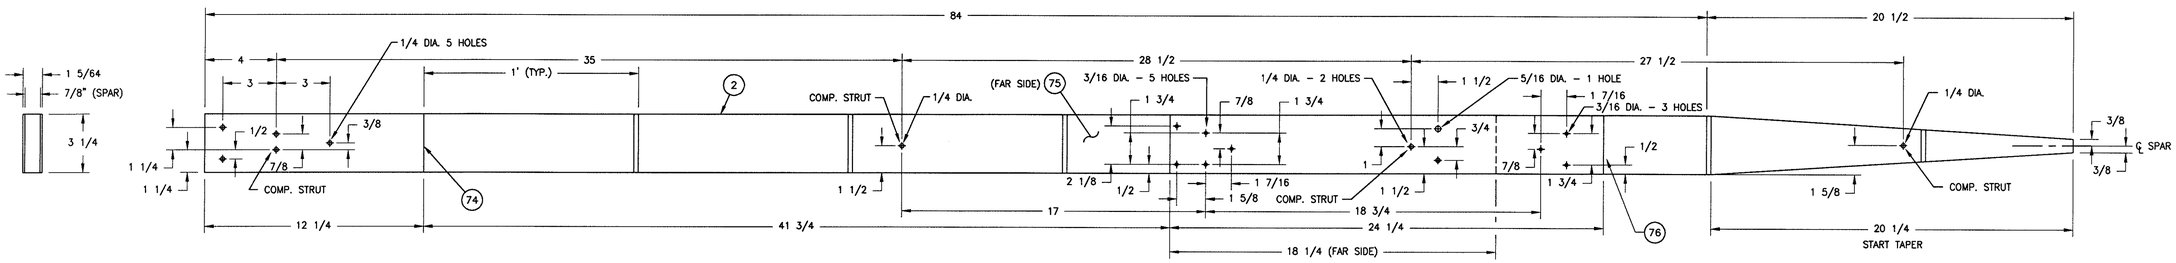

REAR SPAR (R.H.)
LOWER WING

NOTE:

MATCH DRILL ALL HOLES TO METAL OR ALUMINUM FITTINGS FOR PROPER ALIGNMENT.

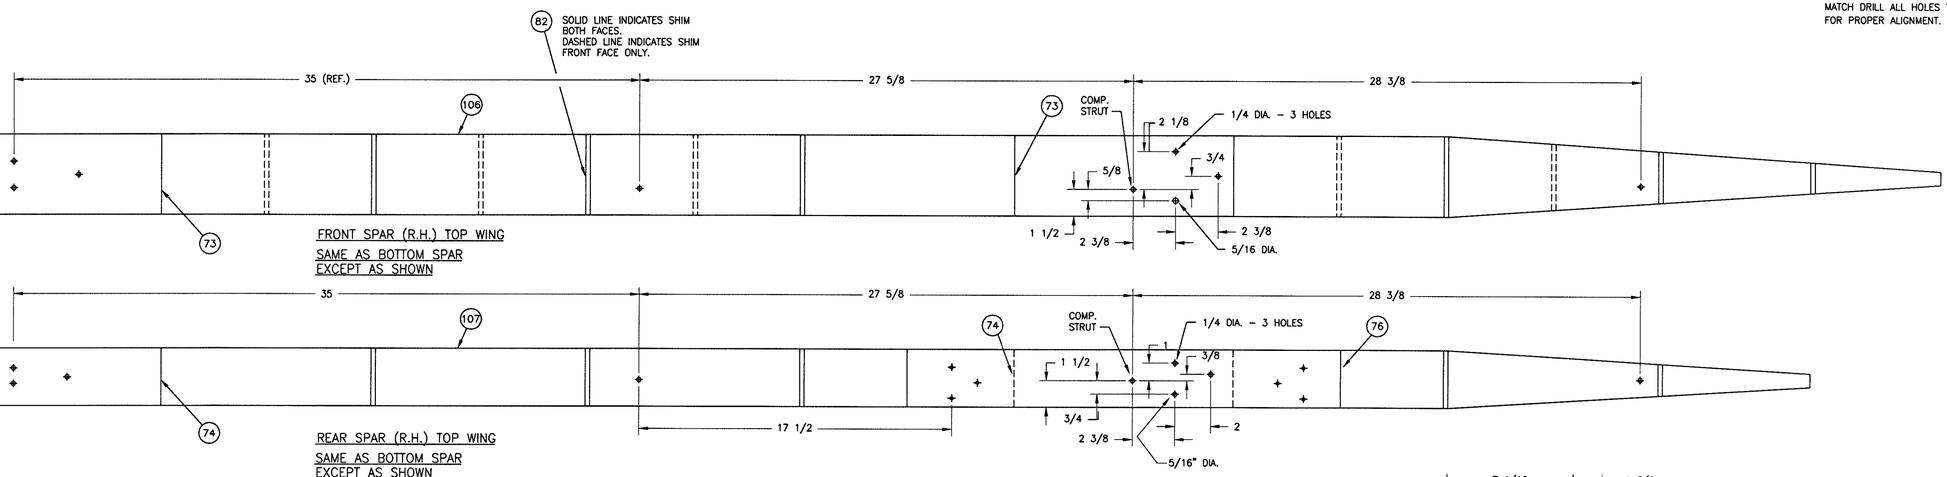

FRONT SPAR (R.H.) TOP WING
SAME AS BOTTOM SPAR
EXCEPT AS SHOWN

REAR SPAR (R.H.) TOP WING
SAME AS BOTTOM SPAR
EXCEPT AS SHOWN

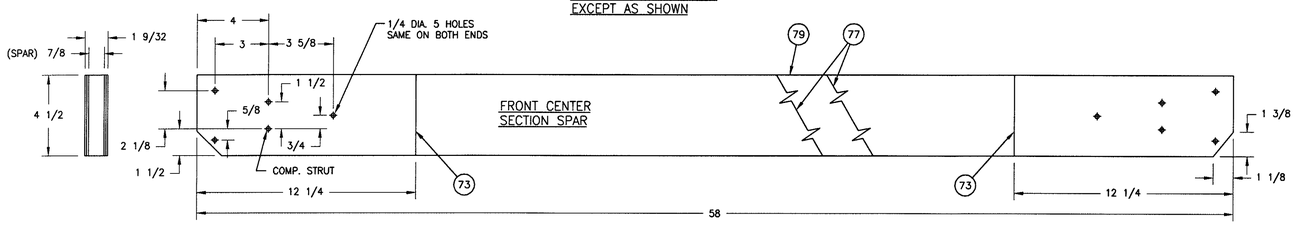

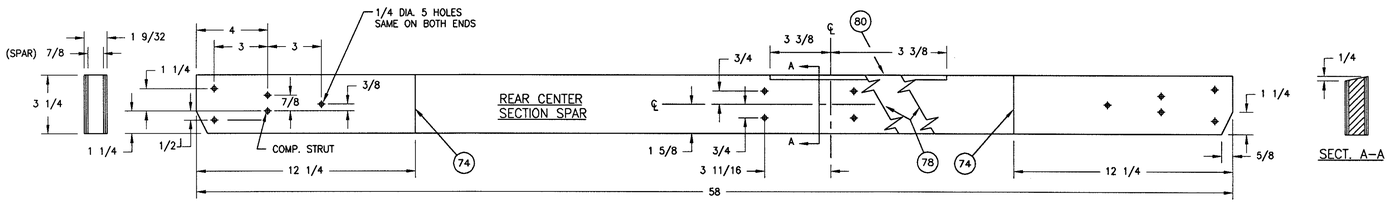

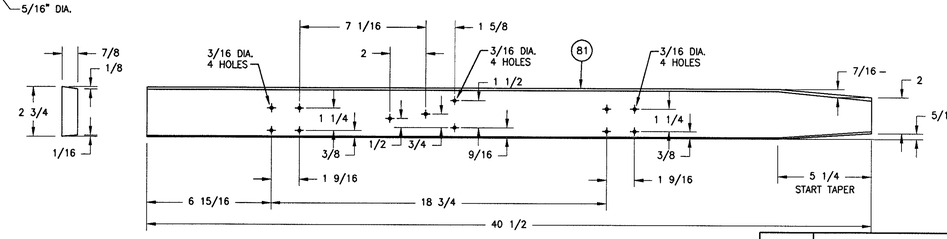

AILERON SPAR (R.H.)

R.H. WING & AILERON SPARS SHOWN
L.H. OPPOSITE

NOTE: 1. MEASUREMENTS FROM WIDE PART OF SPAR.
2. MATCH DRILL ALL HOLES WITH FITTINGS.

PRODUCT NAMES AND PLANS ARE COPYRIGHTED ALL RIGHTS RESERVED–PLANS PURCHASER IS AUTHORIZED TO BUILD ONE AIRPLANE ONLY–UNAUTHORIZED REPRODUCTION, OR COMMERCIAL USE OF THESE PLANS EXPRESSLY PROHIBITED.

2562

REVISION:		DATE:

Sheet No. 4	Starduster Too Model SA300	
DRAWN BY: 6/1/98	WING SPARS	Starduster
DESIGN BY:		

129 Chuck Yeager Way, Oroville, CA 95965
PHONE:530–534–7434 FAX:530–534–7451
WEB SITE: www.starduster.com